

# OUTDOOR LED MENU DISPLAY CASE

## FEATURES:

- Illuminated Menu Display
- Designed to Showcase Menus
- Ideal For Hospitality Venues
- LED Strip Lighting Across Top
- Weatherproof & Durable Design
- Suitable for Outdoor Use
- Optional Printed Logo Header Panel
- Lockable Tamper-Proof Door
- Anti-Vandal Polycarbonate Glazing
- Magnetic Dry Wipe Back Panel
- Keys & Magnetic Pins Included
- Four Sizes Available
- Plug-&-Play Installation

1 Select your desired area for the frame. Position the first fixing point to match the hole in the rear of the frame nearest to the lock.

Rear of frame (Illuminated Menu Case shown)

15mm diameter clearance hole.

If fitting an Illuminated Menu Case for exterior use, as shown, the connector must feed through the external wall unless an extension lead is used.

2 Quarter turn the key anti-clockwise to unlock.

Mark fixing point

Fix through one place

Spirit Level

Mark fixing points

Unlock, open the door & fit one screw. Level the frame & mark the three remaining fixing points.

3 Shut the door & allow the frame to rotate at the fixed point. Drill & rawlplug as necessary, where previously marked.

Drill & rawlplug

Do not attempt to drill the wall through the frame.

Drill & rawlplug

4 Open the door & fit the frame through the three remaining fixing points.

**- Illuminated Menu Case only -**  
Wiring for outdoor use (12 volt)

Power supply transformer. Indoor use ONLY!!

Extension Lead accessory if required

Waterproof connection for outdoor use

Menu Case

1,8 metres 3 metres long 3 metres standard

1 Unlock & open the door. Lock out the stays top & bottom. (If fitted).

Lock out stays. (If fitted).

Typical Display Changing Instructions

2i) Poster Frame

Position the poster under the poster clips.

2ii) Noticeboard and Menu Cases

Use the magnetic pins to hold your displays in position.

Menus & leaflets should be laminated for long term use & to best resist condensation.

3 Release the stays (if fitted) to close the door.

Release stays. (If fitted).

4 Quarter turn the key clockwise to lock.

Copyright 07-12 S-0120-01

