




FRONTIER OFFICE SCREEN LINKING INSTRUCTIONS

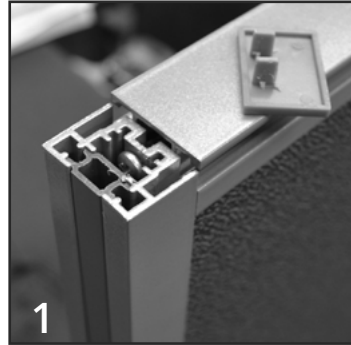


Carefully unwrap screens and position first screen where required. Remove top cap to reveal inline link.

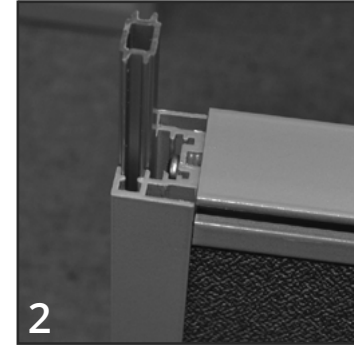


Slide inline link out of the sides you wish to link.

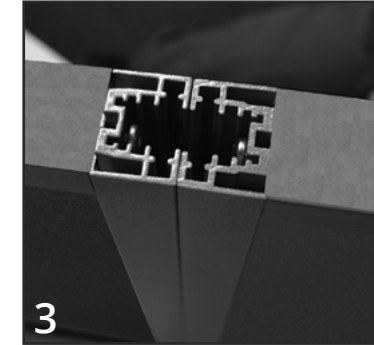


To form an inline link, align the screens as shown.

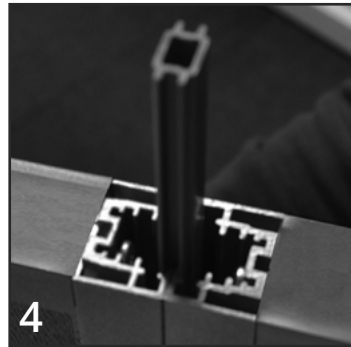


Slide inline link in between the side trims as shown to link the screens.

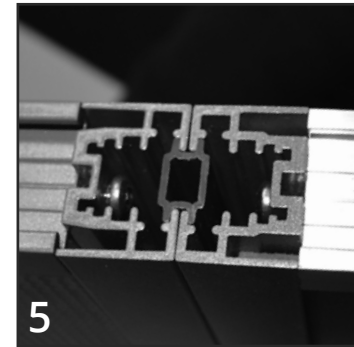


Ensure link is flush with the side trims and then replace the top caps.

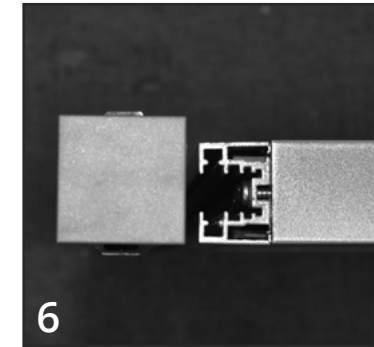


To join at 90°, 3 or 4 way a junction post is required.

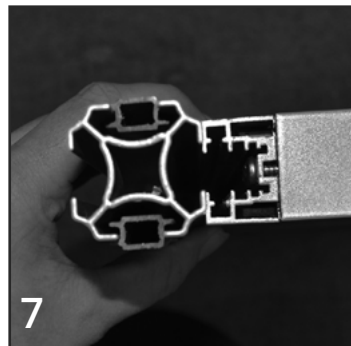

Remove top caps and inline link and position as shown.

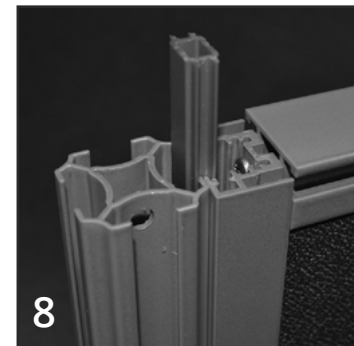

Slide inline link all the way down in between the junction post and screen side trim to join, ensuring link is flush with the top.

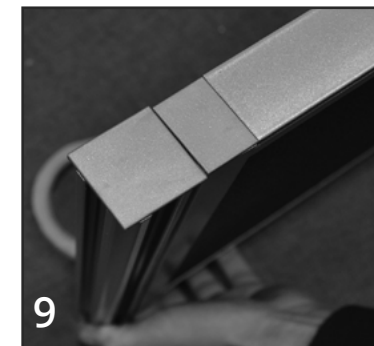

Repeat step 8 for remaining screens to create desired configuration. To finish replace top caps.