


ASSEMBLY INSTRUCTIONS - EXTENDING HEIGHT SCREENS


EXAMPLE SCREEN ARRANGEMENT

Configuration may vary.

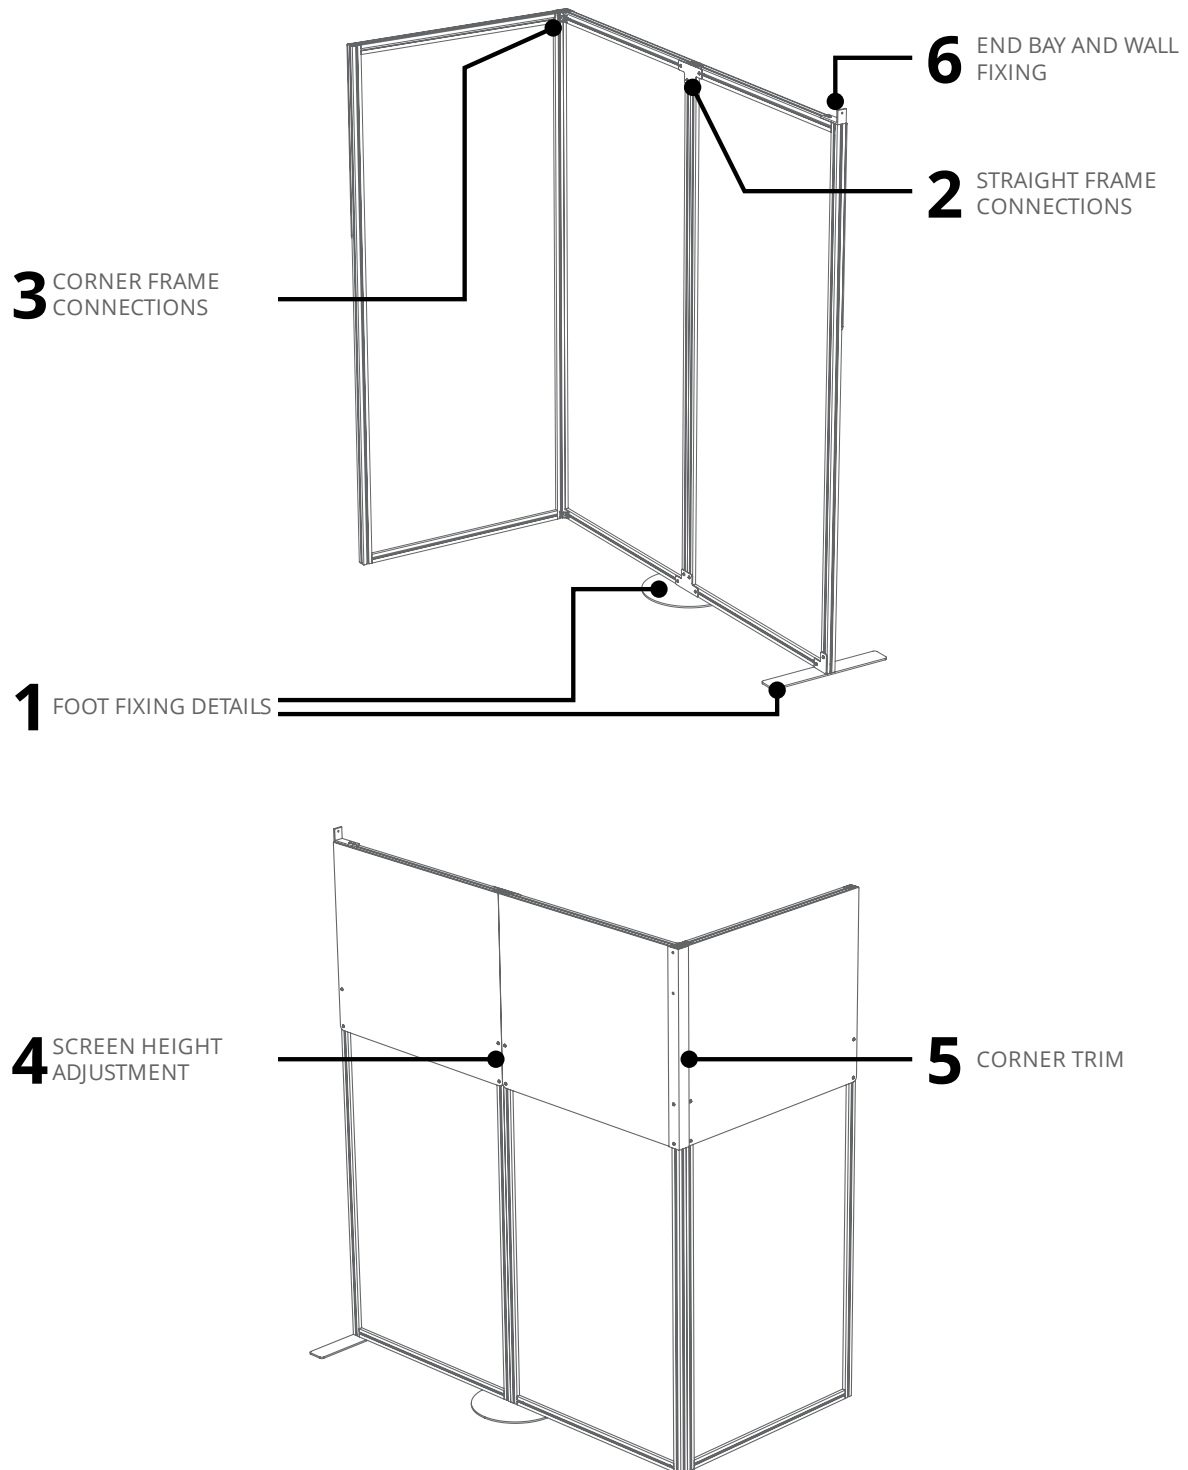


ASSEMBLY INSTRUCTIONS - EXTENDING HEIGHT SCREENS






TOOLS REQUIRED

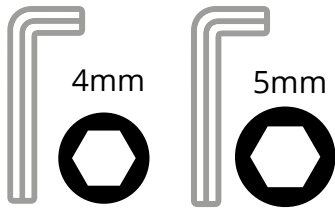

FITTING A ROLL NUT

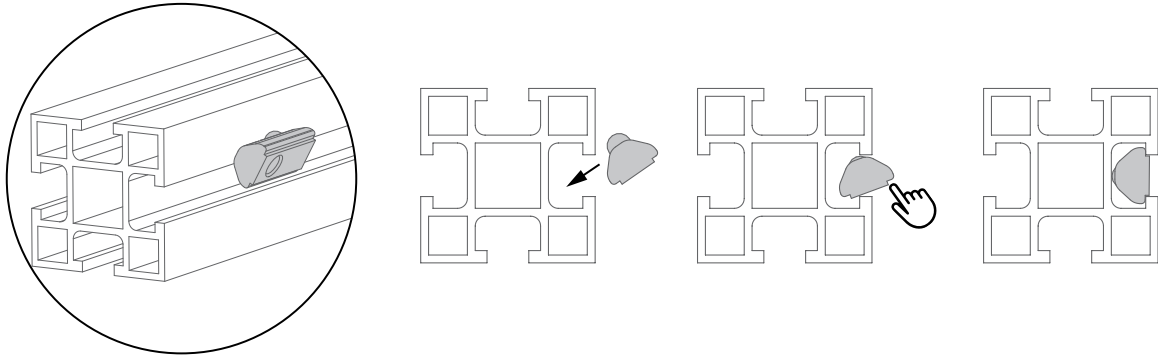




1 END BAY FOOT

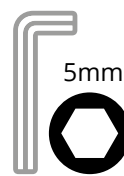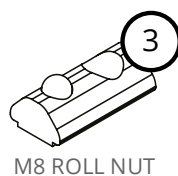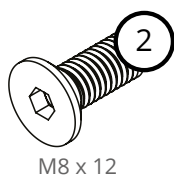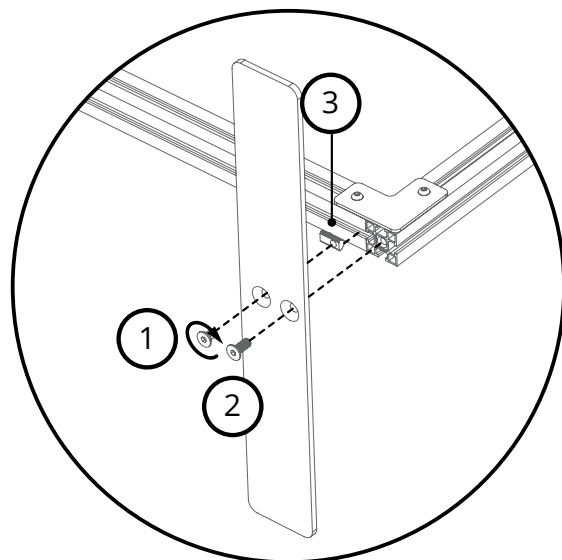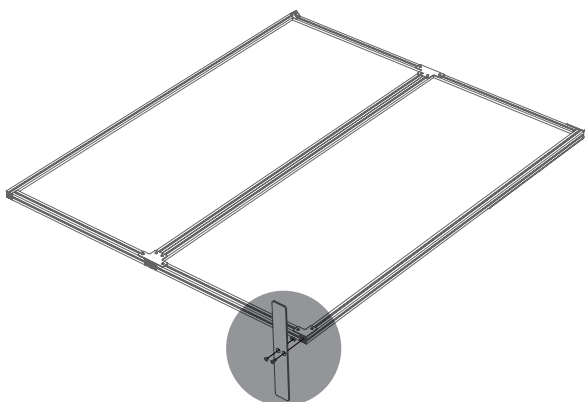

ASSEMBLY INSTRUCTIONS - EXTENDING HEIGHT SCREENS

1

MID BAY FOOT

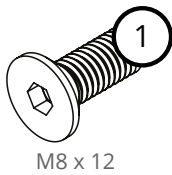
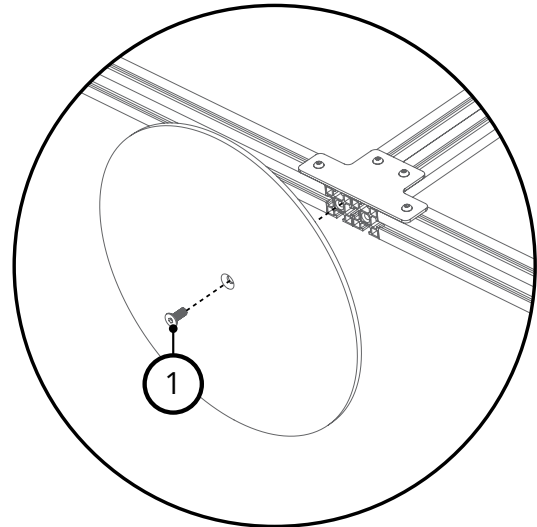
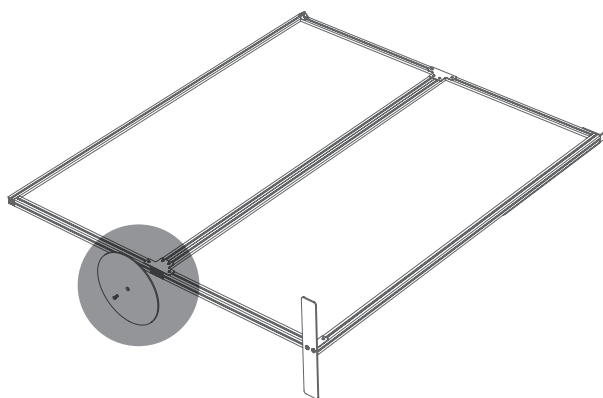


M8 x 12




5mm


2

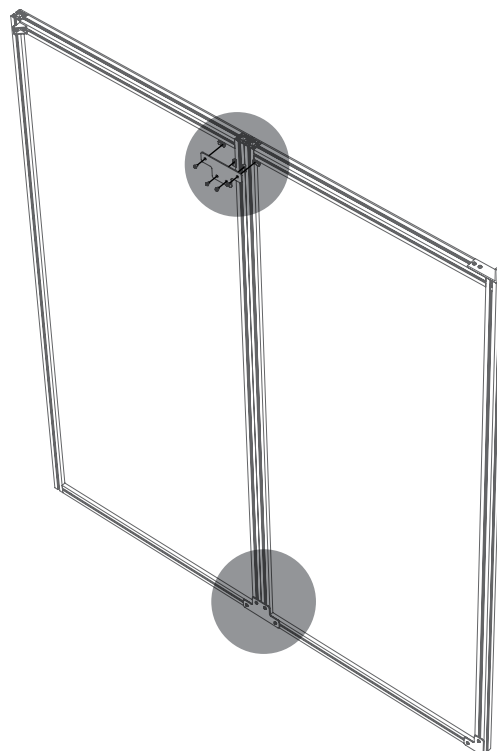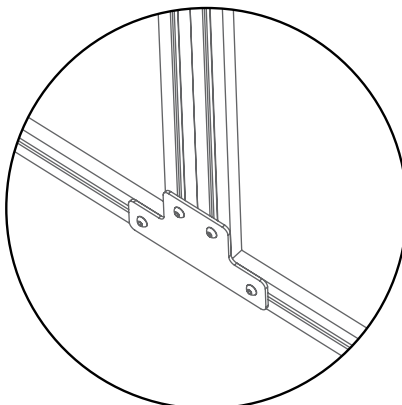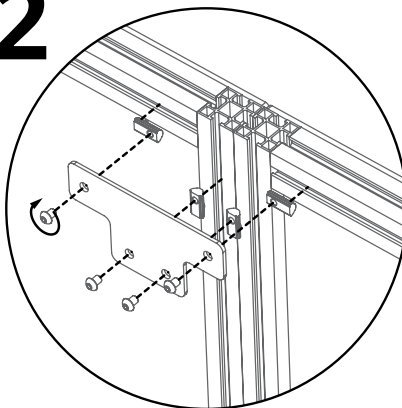

x2




x8



M6 x 12

x8




M6 ROLL NUT




4mm

ASSEMBLY INSTRUCTIONS - EXTENDING HEIGHT SCREENS

3

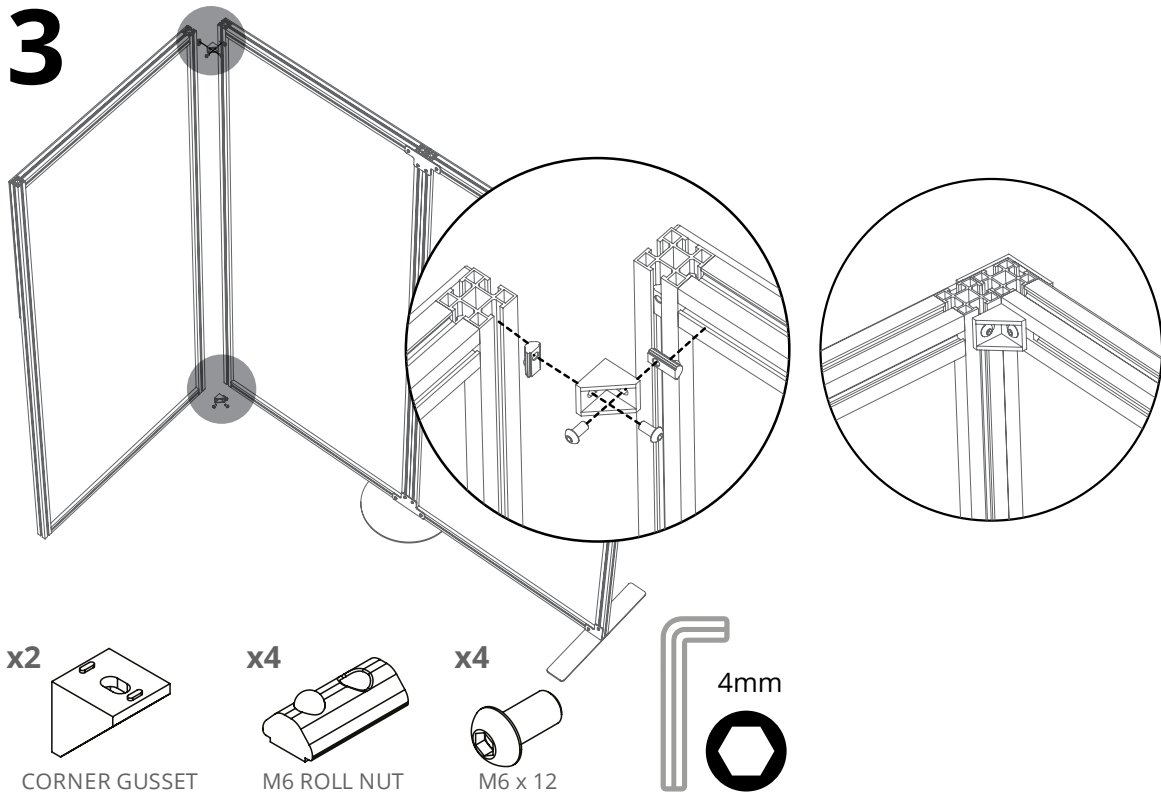


4

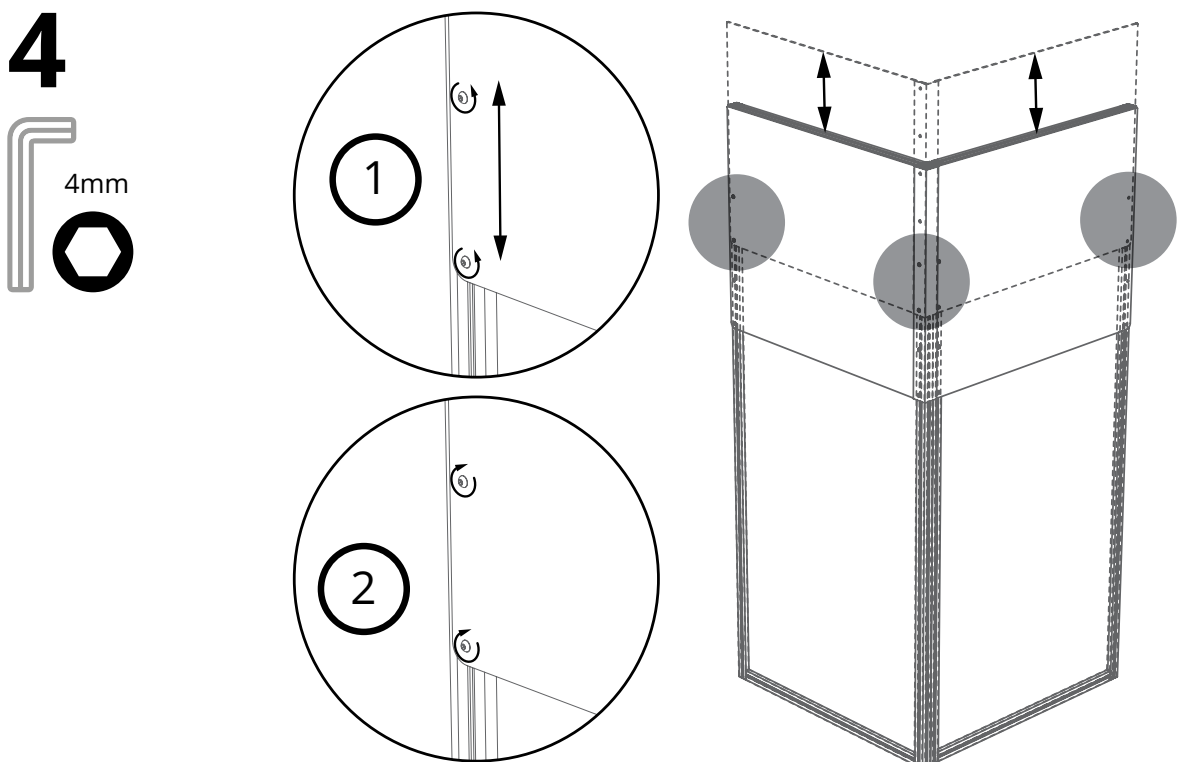

ASSEMBLY INSTRUCTIONS - EXTENDING HEIGHT SCREENS

5


x2



M6 x 16



4mm

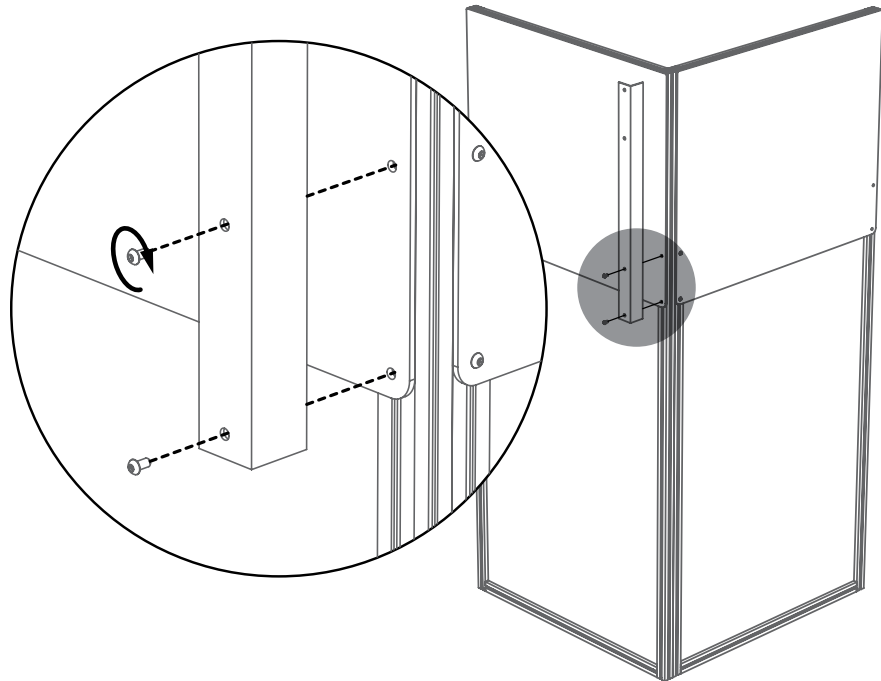


6

x4




M6 x 12

x4



M6 ROLL NUT

x1

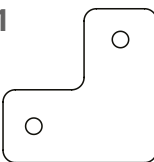

x1

