

WHITE ROOM DIVIDER SCREEN

Installation Guide:
Setup and Feet Installation

STEPS:

1. Place box flat and open from longer edge
2. Carefully slide screen out from box
3. Remove feet from smaller box
4. Unwrap all contents and locate fittings
5. Place long screw into underside of wheel base
6. Align with pre-drilled hole in frame and tighten
7. With a second person, carefully lift the screen into it's upright position, move into place and lock the wheels.

1



2




3




4



5

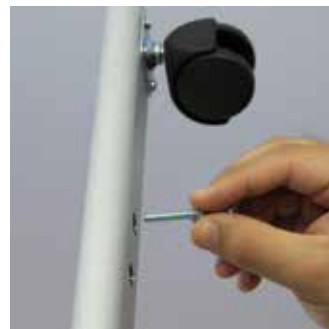

6

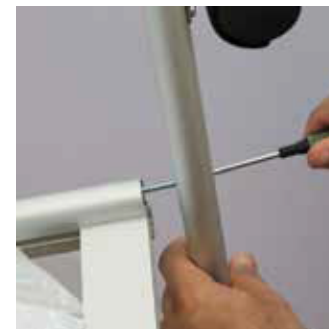

7

